

DMX512 DECODER

LT-932-OLED




OLED display
8 bit / 16 bit
4 wiring methods
Dimming Curve: 0.1~9.9

32
CHANNEL



Product Introduction:

1. Designed for Hi-power multiple channels application, 32 channels output, and Max. 3A current per channel, up to 2304W output power.
2. Easy operation with OLED screen and the touch buttons.
3. 4 kinds of mode optional: single color, color temperature, RGB, RGBW
4. Support 4 kinds of DMX ports with signal isolation function: XLR-3, XLR-5, RJ45 and green terminal (with signal amplifier function).
5. With RDM remote management protocol, the operations can be completed via the RDM master console, such as parameters browsing & setting, DMX address setting, equipment recognition, etc.
6. 16bit/8bit resolution and multiple dimming curve optional.

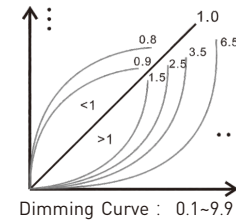

XLR3



XLR5



RJ45



RDM



Photoelectric
isolation




Display

Technical Specs:



Model :	LT-932-OLED
Input Signal :	DMX/RDM
Input Voltage :	12~24Vdc
Current Load :	3A x 32CH Max 96A
Output Power :	(0~36W...72W)x 32CH Max 2304W
DMX Interface :	XLR-3, XLR-5, RJ45, Green terminal
Control Mode :	Dimming/CT/RGB/RGBW
Dimming Curve :	0.1~9.9
Grey Level :	8bit(256 levels) / 16bit(65536 levels)
Photoelectric Isolation :	Yes
Working Temperature :	-30°C~55°C
Dimensions :	L300×W122×H39mm
Package Size :	L309×W127×H41mm
Weight (G.W.) :	1050g



Product Size:

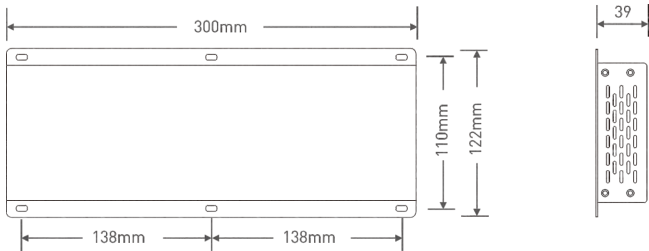

Main Component Descriiption:

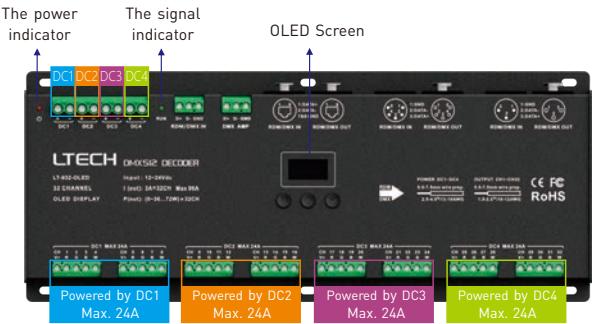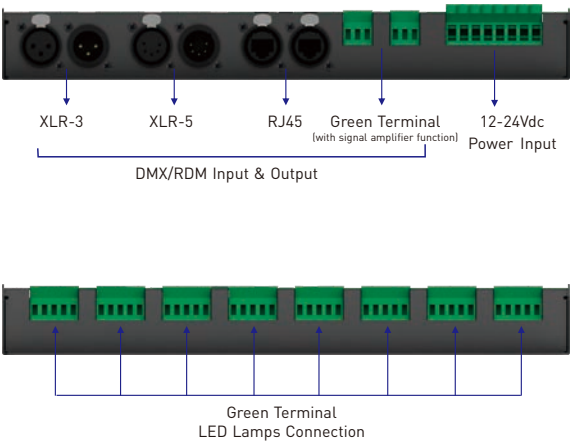

OLED Screen Interface:

1. DMX Address Setting

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Main page

Press "M" key, switch entries.
Press "▲" or "▼" key, parameter adjustment.
Long press "M" key, back to main page.
Exit: back to previous page.

2. PWM Frequency

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to switch frequency
Optional: High
Std (standard)

3. Mode

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to switch mode
Optional : Dim
CT
RGB
RGBW

4. Resolution

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to switch resolution
Optional : 8bit
16bit

5. Dimming Curve

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to switch dimming curve
Optional : Standard
Linear
0.1~9.9

6. Tool

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to enter submenu

Screen: ON+Addr
Contrast: 40%
Buzzer: ON
EXIT&v

EXIT (Press"v" key)

7. Test

DMX: 001 Hz: High
Mode: RGBW 8bit
Curve: Standard
TOOL&v TEST&v

Press "v" or "v" key to enter submenu



Brightness setting
Range: 0~255

CH01: 255
CH02: 255
CH03: 255 [^&V]
CH04: 255 EXIT &V


Page turning (press"v" or "v" key)
EXIT (Press"v" key)

Wiring diagram:

1 Connecting LED lights:

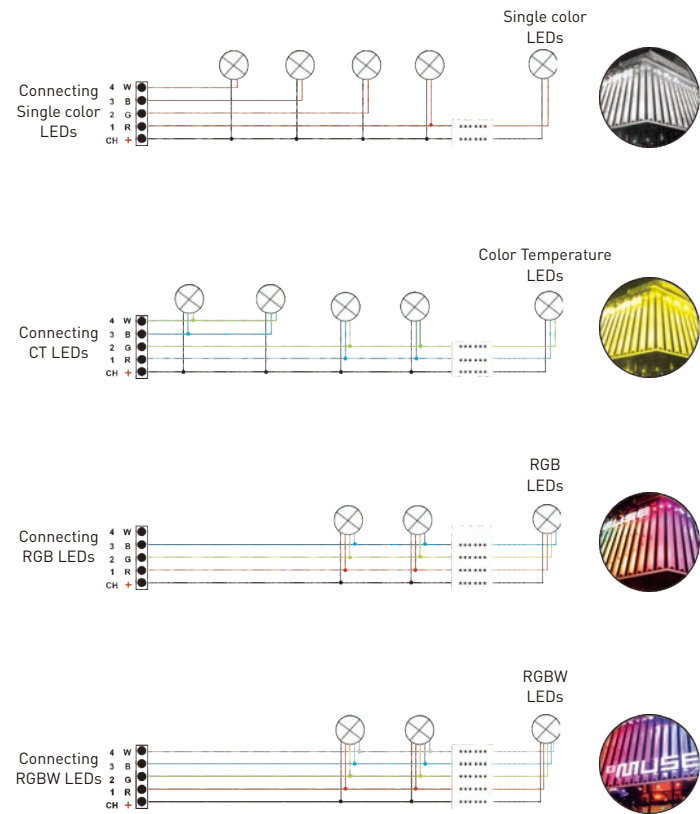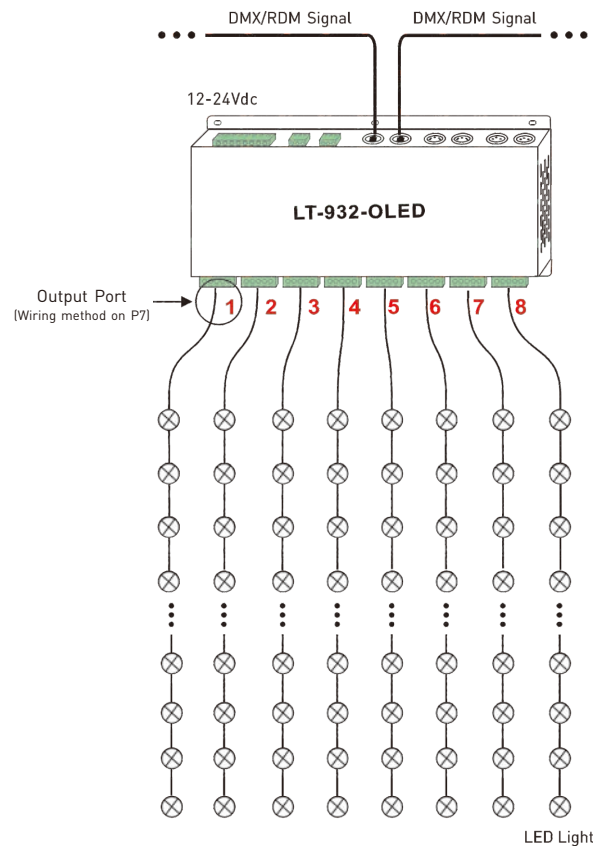


2. DMX console connection:

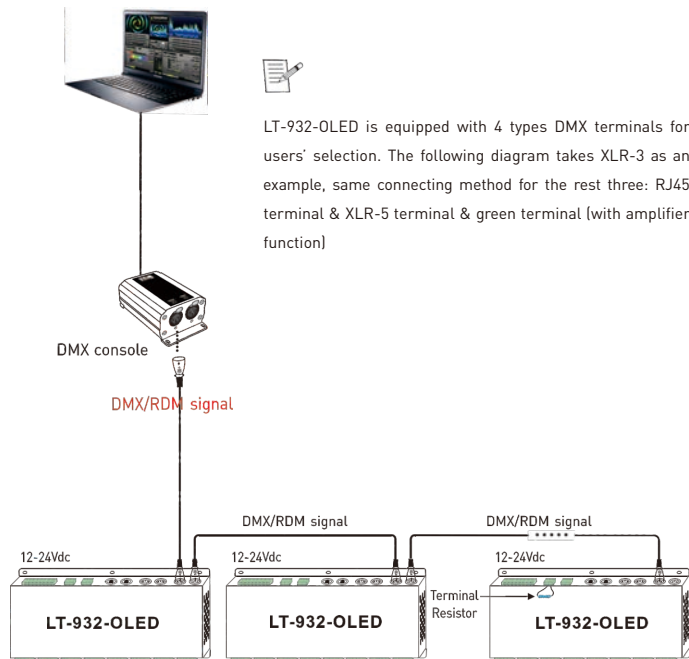


- * If the recoil effect occurs because of longer signal line or bad line quality, please try to connect 0.25W 90-120Ω terminal resistor at the end of each line.
- * An amplifier is needed when more than 32 decoders are connected, signal amplification should not be more than 5 times continuously.

3. The connection diagram of 4 kinds of DMX/RDM terminals:

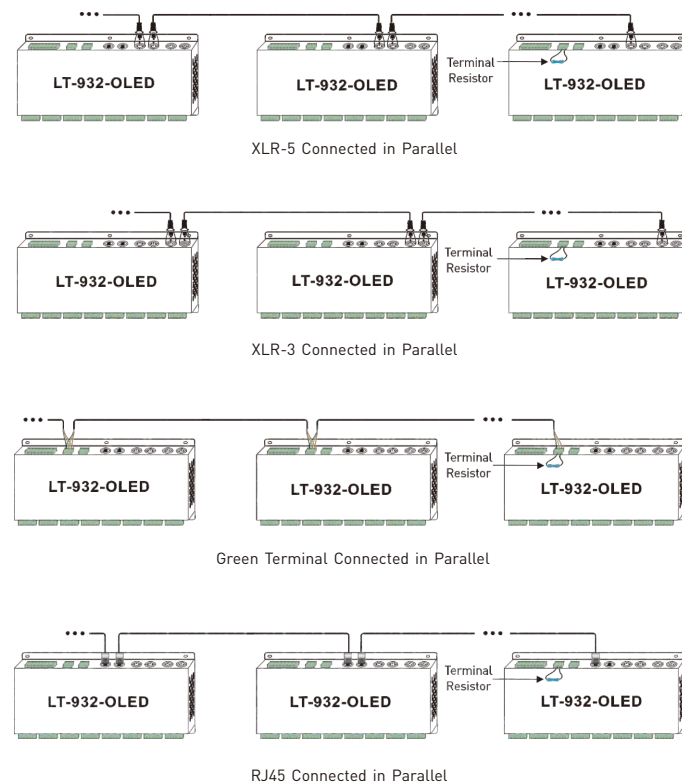

These 4 terminals can be connected in a mixed way .

4. The connection diagram of AMP signal amplifier terminal:

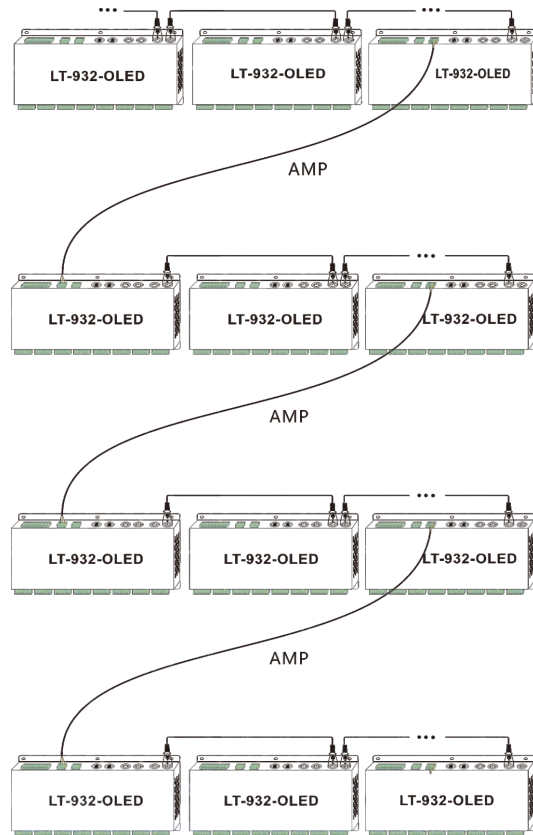

* AMP interface can be used for signal amplification when too many DMX decoder are connected or signal line is too long, signal amplification should be no more than 5 times continuously.

Address setting table

Mode		DIM	CT	RGB	RGBW
Address Quantity		8	16	24	32
Resolution		8bit	8bit	8bit	8bit
Channel	1	001	001	001	001
	2	001	002	002	002
	3	001	001	003	003
	4	001	002	003	004
	5	002	003	004	005
	6	002	004	005	006
	7	002	003	006	007
	8	002	004	006	008
	9	003	005	007	009
	10	003	006	008	010
	11	003	005	009	011
	12	003	006	009	012
	13	004	007	010	013
	14	004	008	011	014
	15	004	007	012	015
	16	004	008	012	016
	17	005	009	013	017
	18	005	010	014	018
	19	005	009	015	019
	20	005	010	015	020
	21	006	011	016	021
	22	006	012	017	022
	23	006	011	018	023
	24	006	012	018	024
	25	007	013	019	025
	26	007	014	020	026
	27	007	013	021	027
	28	007	014	021	028
	29	008	015	022	029
	30	008	016	023	030
	31	008	015	024	031
	32	008	016	024	032

Mode		DIM	CT	RGB	RGBW
Address Quantity		16	32	48	64
Resolution		16bit	16bit	16bit	16bit
Channel	1	001 002	001 002	001 002	001 002
	2	001 002	003 004	003 004	003 004
	3	001 002	001 002	005 006	005 006
	4	001 002	003 004	005 006	007 008
	5	003 004	005 006	007 008	009 010
	6	003 004	007 008	009 010	011 012
	7	003 004	005 006	011 012	013 014
	8	003 004	007 008	011 012	015 016
	9	005 006	009 010	013 014	017 018
	10	005 006	011 012	015 016	019 020
	11	005 006	009 010	017 018	021 022
	12	005 006	011 012	017 018	023 024
	13	007 008	013 014	019 020	025 026
	14	007 008	015 016	021 022	027 028
	15	007 008	013 014	023 024	029 030
	16	007 008	015 016	023 024	031 032
	17	009 010	017 018	025 026	033 034
	18	009 010	019 020	027 028	035 036
	19	009 010	017 018	029 030	037 038
	20	009 010	019 020	029 030	039 040
	21	011 012	021 022	031 032	041 042
	22	011 012	023 024	033 034	043 044
	23	011 012	021 022	035 036	045 046
	24	011 012	023 024	035 036	047 048
	25	013 014	025 026	037 038	049 050
	26	013 014	027 028	039 040	051 052
	27	013 014	025 026	041 042	053 054
	28	013 014	027 028	041 042	055 056
	29	015 016	029 030	043 044	057 058
	30	015 016	031 032	045 046	059 060
	31	015 016	029 030	047 048	061 062
	32	015 016	031 032	047 048	063 064

Attention:

1. The product shall be installed and serviced by the qualified person.
2. This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
3. Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
4. Please check if the output voltage of the LED power supply used comply with the working voltage of the product.
5. Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
6. Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
7. If a fault occurs, please return the product to your supplier. Do not attempt to fix this product by yourself.

Warranty Agreement:

1. We provide lifelong technical assistance with this product:
 - A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement if cover manufacturing faults only.
 - For faults beyond the 5-year warranty, we reserve the right to charge for time and parts.
 2. Warranty exclusions below:
 - Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
 - The product appears to have excessive physical damage.
 - Damage due to natural disasters and force majeure.
 - Warranty label, fragile label and unique barcode label have been damaged.
 - The product has been replaced by a brand new product.
 3. Repair or replacement as provided under this warranty is the exclusive remedy to the customer. We shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.
 4. Any amendment or adjustment to this warranty must be approved in writing by our company only.
- ★ This manual only applies to this model. We reserve the right to make changes without prior notice.